



THERMOFLAN



Sign

UVMARK GF EXPOSURE UNIT



Exposure unit size 550x350 mm

6 UV tubes of 20 W

Vacuum system by valve inflation

Digital timer for tube ignition & extinguishment + buzzer when cycle is over

SEP THERMOFLAN

MOLIERES-CAVAILLAC 30120 LE VIGAN

www.thermoflan.com – Tél : 04 67 81 14 41 – Fax : 04 67 81 09 80 – Email : info@thermoflan.com

PRESENTATION



STARTING

- 1- Connect the plug placed on the right side of the machine to electric supply.
Start the machine via the general switch placed on the control front panel.

EXPOSURE

- 1 - open the lid of the exposure unit and make sure that compass are engaged :



- 2 - lift the glass plate up to the blocking device :



- 3 - Place the plate (sensitive side upside) onto the black part (vacuum system). Cover with negative or positive film
- 4 - Close the exposure unit, releasing the glass plate blocking device and holding this glass plate.

5 - Push the vacuum switch. Lightly press upon the glass plate to make vacuum easier. A short moment later, the noise of the vacuum pump changes : this means that vacuum is made (the film flattens over the Metalphoto plate). Do not switch off until exposure is not over.

6 - Set the timer according to required exposure time :
Exposure time depends on film density and work to achieve.

7 - Switch on the timer . The upper tubes light up. When exposure time is over, the time-switch rings and tubes switch off. The last exposure time is saved in the timer.




8 - Switch off vacuum . Wait for a few seconds in order that air can go into the exposure unit.

9 - Open the lid of the exposure unit and make sure that compass are correctly engaged.

7- Open the glass plate without forcing (otherwise, air has not got into the unit yet) and lift it up to the blocking device.

FUSE

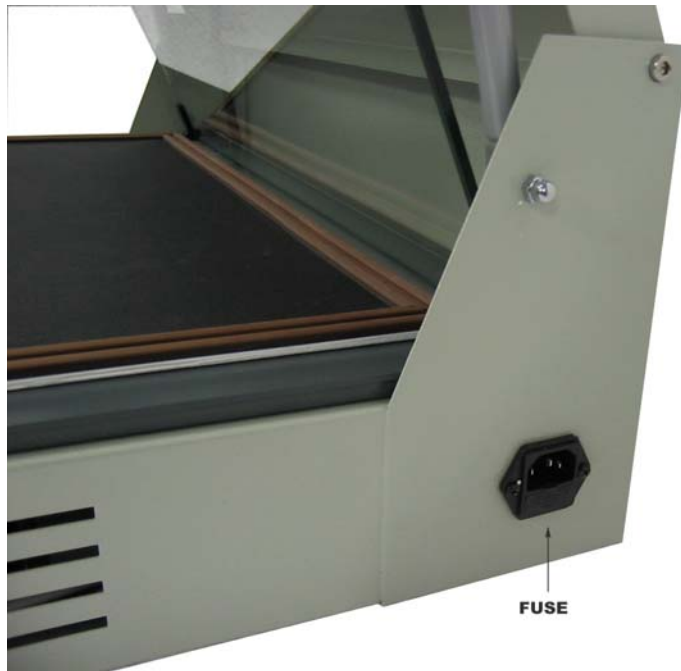

- 1- Open the fuse compartment on the right side of the machine.
- 2- Remove defective fuse and place the new one in the same compartment.