

FAST DROP STARTER KIT USER MANUAL -

Instruction setup / Included items



1. Two cans of 500 gr. net weight fast drop resin
2. Set of eight vario dose with red caps
3. Set of eight silver dispensing caps
4. Set of three modular dispensing tubes
5. Set of six dispensing needles
6. Two tutorials with instructions



1. Lay tutorials on a tray, use spray remount, magnetic stripes or masking tape to secure. Check flatness of the working tray with a level



2. Gently weed excess vinyl from your print tutorials



3. Flatten the print with a pressure roller in order to prevent edge wings



4. Extend the telescopic cap by pulling top wings



5. Pull and remove the safety look ring



6. Pour in the dispenser (resin first) equal amount of the two components using the print graduation or a separate precise digital scale



7. Close the dispenser with the cap (red) and lock



8. Shake the dispenser for 1 minute



9. Apply the dispensing cap (silver)



10. Cut the top of the dispensing cap with scissors



11. Cut with scissors: 2 cm of clear tube and 1 cm of both black and red tube



12. Insert the three dispensing tubes in this order: 1) clear, 2) black, 3) red. Now you are ready to start doming the tutorials following the separate visual instructions


HOW TO USE FAST DROP SYSTEM



check flatness
of the working tray



1




2

check flatness
of the print layout

Tip: to avoid roll memory
use spray remount,
magnetic stripes or
masking tape

choice of the doming tubes
according to the label layout

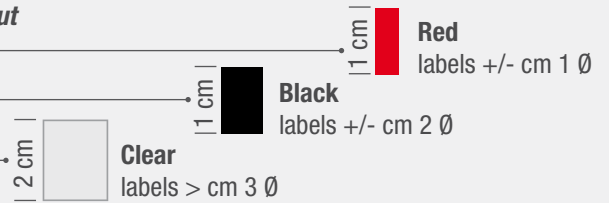


Legend



self-adhesive vinyl thermo-adhesive



resin



doming path



use as if you are writing
very close to the film

1mm



doming path examples
on regular shaped labels

no drawing:
dispense dots
or lines only!

AFTER
FEW MINUTES

doming path example
on lettering

AFTER
FEW MINUTES

leave empty space
in proximity of sharpe
corners